

# EVBOX Light J200

## Control solutions for cold rooms with on-board moto-condensing unit




### EN ENGLISH

- Degree of protection IP65.
- Power supply 115... 230 VAC or 230 VAC (according to the model).
- Incorporated clock (according to the model).
- Cabinet probe and evaporator probe (PTC/NTC).
- Door switch input.
- Compressor relay 16 A res. @ 250 VAC or 30 A res. @ 250 VAC (according to the model).
- Alarm buzzer.
- Incorporated Bluetooth Low Energy sensor (according to the model).
- TTL MODBUS slave port for EVconnect app, EPoCA remote monitoring system or for BMS.

### 1 MEASUREMENTS AND INSTALLATION

Measurements in mm (Inches); to be fitted on-board, fixing screws not provided.

- N.B.
- make sure to have a junction for rigid tube; the maximum diameter of the fixing hole must be 28.5 mm (1 1/8 in)
  - to ensure the degree of protection IP65 of the whole covering, install the device using the appropriate holes only.

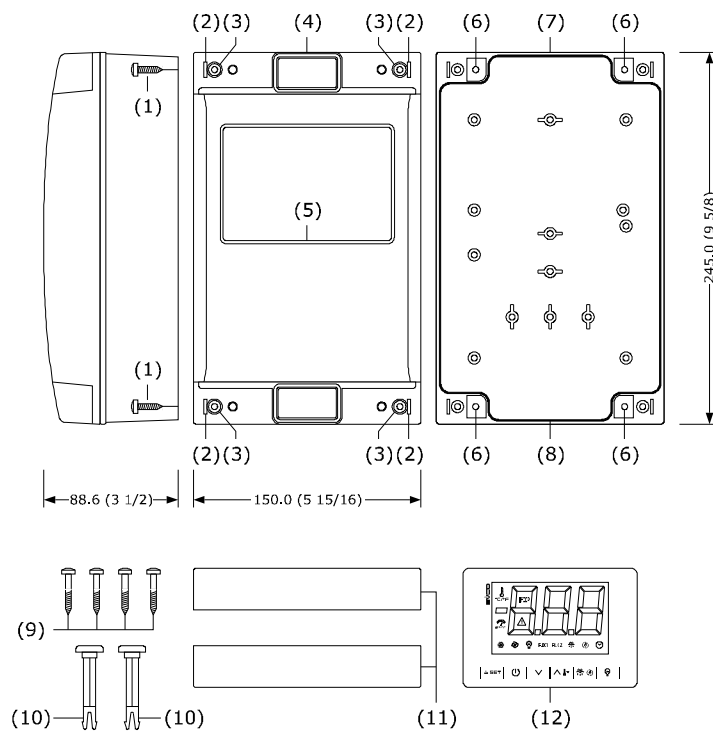


- Fasten the back shell (7) to the wall with 4 screws (1) using the proper holes (6).
- Make sure the gasket (8) is into the proper seat.
- Lean the front shell (4) against the back shell (7) and insert the 2 fastening tabs (10) thoroughly in the proper holes (2) on the right-hand side or the left-hand side of the front shell (4).
- Fasten the controller (12) pushing it from the front into the proper seat (5).
- If the connecting cables come from above, drill a hole having a diameter suitable to fix a junction for rigid tube on the upper part of the back shell (7); if vice versa the cables come from below, drill the hole on the lower part of the shell.
- Screw the junction for rigid tube to the back shell (7).
- Connect the controller (12) as shown in the section **ELECTRICAL CONNECTION** getting the cables to pass through the junction for rigid tube.
- Fasten the front shell (4) against the back shell (7) with 4 screws (9) using the proper holes (3).
- Fasten the cover caps (11) on the upper part and on the lower part of the front shell (4).

#### INSTALLATION PRECAUTIONS

- Ensure that the working conditions are within the limits stated in the **TECHNICAL SPECIFICATIONS** section.
- Do not install the device close to heat sources, equipment with a strong magnetic field, in places subject to direct sunlight, rain, damp, excessive dust, mechanical vibrations or shocks.
- In compliance with safety regulations, the device must be installed properly to ensure adequate protection from contact with electrical parts. All protective parts must be fixed in such a way as to need the aid of a tool to remove them.

### 2 ELECTRICAL CONNECTION

- N.B.
- Use cables of an adequate section for the current running through them.
  - To reduce any electromagnetic interference connect the power cables as far away as possible from the signal cables.

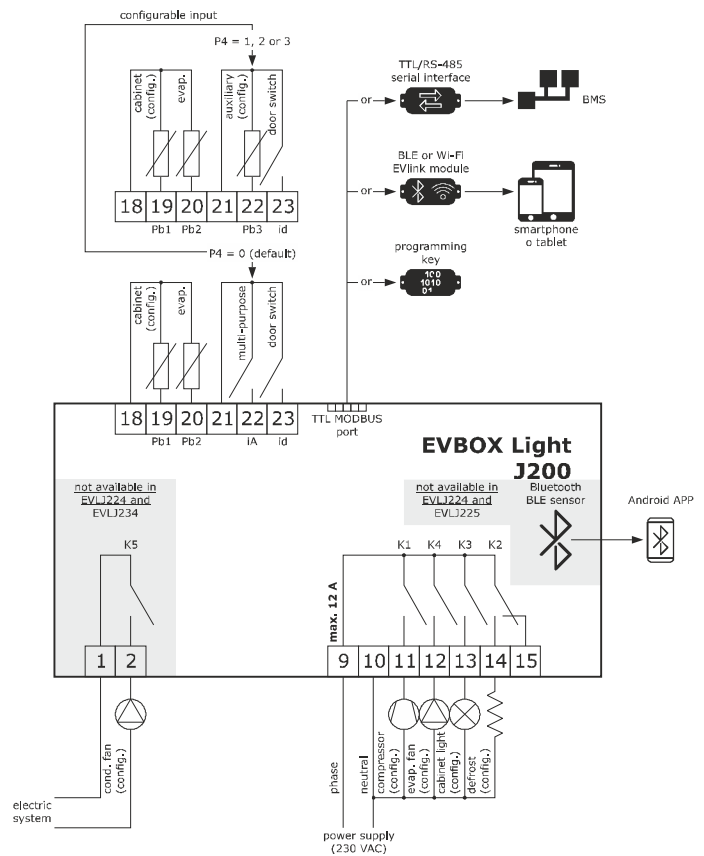

#### PRECAUTIONS FOR ELECTRICAL CONNECTION

- If using an electrical or pneumatic screwdriver, adjust the tightening torque.
- If the device has been moved from a cold to a warm place, the humidity may have caused condensation to form inside. Wait about an hour before switching on the power.
- Make sure that the supply voltage, electrical frequency and power are within the set limits. See the section **TECHNICAL SPECIFICATIONS**.
- Disconnect the power supply before doing any type of maintenance.
- Do not use the device as safety device.
- For repairs and for further information, contact the EVCO sales network.

### 3 FIRST-TIME USE


- Install following the instructions given in the section **MEASUREMENTS AND INSTALLATION**.
- Power up the device and an internal test will be run. The test normally takes a few seconds, when it is finished the display will switch off.
- Configure the device as shown in the section **Setting configuration parameters**. Recommended configuration parameters for first-time use.

PAR.	DEF.	PARAMETER	MIN... MAX.
SP	0.0	setpoint	r1... r2
P0	1	probe type	0 = PTC 1 = NTC
P2	0	temperature unit of measurement	0 = °C 1 = °F
d1	0	defrost type	0 = electric 1 = hot gas 2 = compressor stopped

Then check that the remaining settings are appropriate; see the section **CONFIGURATION PARAMETERS**.

- Disconnect the device from the mains.
- Make the electrical connection as shown in the section **ELECTRICAL CONNECTION** without powering up the device.
- For the connection in an RS-485 network connect the interface EVIF22TSX or EVIF23TSX, to activate real time functions in EVLJ224 and EVLJ225 connect the module EVIF23TSX, to use the device with the EPoCA remote monitoring system, connect the EVIF25TWX module, to use the device with the Android APP EVconnect connect the interface EVIF25TBX (or use EVLJ234 or EVLJ235); see the relevant instruction sheets. **If EVIF22TSX or EVIF23TSX is used, set parameter BLE to 0.**
- Power up the device.

### 4 USER INTERFACE AND MAIN FUNCTIONS

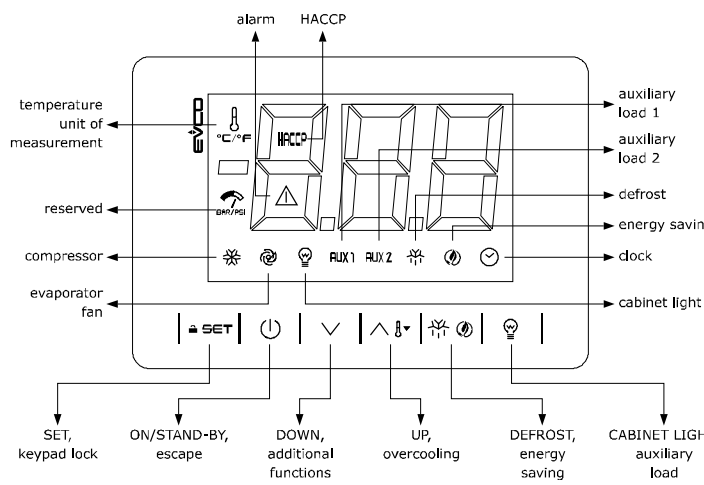

#### 4.1 Switching the device on and off

- Touch the ON/STAND-BY key for 2s. If the device is switched on, the display will show the P5 value ("cabinet temperature" default); if the display shows an alarm code, see the section **ALARMS**.

LED	ON	OFF	FLASHING
☀	compressor on	compressor off	- compressor protection active - setpoint being set
🌀	evaporator fan on	evaporator fan off	evaporator fan stop active
💡	cabinet light on	cabinet light off	cabinet light on by digital input
AUX 1	auxiliary function 1 on	auxiliary function 1 off	- auxiliary function 1 on by digital input - auxiliary function 1 delay active
AUX 2	auxiliary function 2 on	auxiliary function 2 off	- auxiliary function 2 on by digital input - auxiliary function 2 delay active
🌨	defrost or pre-drip active	-	- defrost delay active - dripping active
🌿	- energy saving active - low consumption active	-	-

🕒	view time	-	set date, time and day of the current week
🌡	view temperature	-	overcooling or overheating active
HACCP	saved HACCP alarm	-	new HACCP alarm saved
⚠	alarm active	-	-

If Loc = 1 (default) and 30s have elapsed without the keys being pressed, the display will show the "Loc" label and the keypad will lock automatically.

#### 4.2 Unlock keypad

Touch a key for 1s: the display will show the label "UnL".

#### 4.3 Set the setpoint (if r3 = 0, default)

Check that the keypad isn't locked.

- Touch the SET key.
- Touch the UP or DOWN key within 15s to set the value within the limits r1 and r2 (default "-40... 50").
- Touch the SET key (or do not operate for 15s).

#### 4.4 Activate manual defrost (if r5 = 0, default)

Check that the keypad is not locked and that overcooling is not active.

- Touch the DEFROST key for 2s.
- If P3 = 1 (default), defrost is activated provided that the evaporator temperature is lower than the d2 threshold.

#### 4.5 Cabinet light on/off (if u1c... u5c = 5)

- Touch the CABINET LIGHT key.

#### 4.6 Button-operated load on/off (if u1c... u5c = 10 or 11)

- Touch the CABINET LIGHT key (for 2s if u1c... u5c = 5).

If u1c... u5c = 6, the demisting switch on for the u6 duration.

#### 4.7 Silence buzzer (if u9 = 1, default)

Touch a key.

If u1c... u5c = 11 and u4 = 1, the alarm output is deactivated.

### 5 ADDITIONAL FUNCTIONS

#### 5.1 Activate/deactivate overcooling and overheating

Check that the keypad is not locked.

- Touch the UP key for 2s.

FUNCTION	CONDITION	CONSEQUENCE
overcooling	r5 = 0 and defrost not active	the setpoint becomes "setpoint - r6", for the r7 duration
overheating	r5 = 1	the setpoint becomes "setpoint + r6", for the r7 duration

#### 5.2 Activate/deactivate energy saving in manual mode (if r5 = 0)

Check that the keypad is not locked.

- Touch the DEFROST key.

The setpoint becomes "setpoint + r4", at maximum for HE2 duration.

#### 5.3 Activate the high or low humidity functions (if F0 = 5)

Check that the keypad isn't locked.

- Touch the DOWN key for 1s.
- Touch the UP or DOWN key within 15s to select the label "rH".
- Touch the SET key for 2s until the display shows the right label for the function (only touch the key to see the function activated).

LAB.	DESCRIPTION
rhL	low humidity function (evaporator fan with F17 and F18 if the compressor is off, on if the compressor is on)
rhH	high humidity function (evaporator fan on)

- Touch the ON/STAND-BY key (or do not operate for 60s) to exit the procedure.

#### 5.4 View/delete HACCP alarm information (not available in EVLJ224 and EVLJ225)

Check that the keypad isn't locked.

- Touch the DOWN key for 1s.
- Touch the UP or DOWN key within 15s to select a label.

LAB.	DESCRIPTION
LS	view HACCP alarm information
rLS	delete HACCP alarm information

- Touch the SET key.
- Touch the UP or DOWN key to select an alarm code (to select label "LS" or to set "149" (to select label "rLS").

COD.	DESCRIPTION
AL	low temperature alarm
AH	high temperature alarm
id	open door alarm (if i4 = 1)
PF	power failure alarm (available in EVLJ234 and EVLJ235 or in EVLJ224 and EVLJ225 with interface EVIF25TBX connected)

- Touch the SET key.
- Touch the ON/STAND-BY key (or do not operate for 60s) to exit the procedure.

Example of alarm information (e.g. a high temperature alarm).

8.0	critical value (calculated cabinet/product temperature) was 8.0 °C/°F
Sta	(available in EVLJ234 and EVLJ235 or in EVLJ224 and EVLJ225 with interface EVIF25TBX connected)
y15	alarm signalled in 2015
n03	alarm signalled in March
d26	alarm signalled on 26 March 2015
h16	alarm signalled at 16:00
n30	alarm signalled at 16:30
dur	
h01	alarm lasted 1h
n15	alarm lasted 1h 15min

#### 5.5 View/delete compressor functioning hours

Check that the keypad isn't locked.

- Touch the DOWN key for 1s.
- Touch the UP or DOWN key within 15s to select a label.

LAB.	DESCRIPTION
CH1	view compressor functioning hundreds of hours
CH2	view second compressor functioning hundreds of hours (if u1c... u5c = 1)
rCH	delete compressor and second compressor functioning hours



97	u2c	4	relay K2 configuration	0 = first compressor 1 = second compressor 2 = evaporator fan 3 = condenser fan 4 = defrost 5 = cabinet light 6 = demisting 7 = door heaters 8 = heater for neutral zone 9 = dripping heater 10 = button-operated load 1 11 = button-operated load 2 12 = alarm 13 = on/stand-by 14 = evaporator fan 2 15 = defrost 2	
98	u3c	5	relay K3 configuration	0 = first compressor 1 = second compressor 2 = evaporator fan 3 = condenser fan 4 = defrost 5 = cabinet light 6 = demisting 7 = door heaters 8 = heater for neutral zone 9 = dripping heater 10 = button-operated load 1 11 = button-operated load 2 12 = alarm 13 = on/stand-by 14 = evaporator fan 2 15 = defrost 2	
99	u4c	2	relay K4 configuration	0 = first compressor 1 = second compressor 2 = evaporator fan 3 = condenser fan 4 = defrost 5 = cabinet light 6 = demisting 7 = door heaters 8 = heater for neutral zone 9 = dripping heater 10 = button-operated load 1 11 = button-operated load 2 12 = alarm 13 = on/stand-by 14 = evaporator fan 2 15 = defrost 2	
100	u5c	3	relay K5 configuration (not available in EVLJ224 and EVLJ234)	0 = first compressor 1 = second compressor 2 = evaporator fan 3 = condenser fan 4 = defrost 5 = cabinet light 6 = demisting 7 = door heaters 8 = heater for neutral zone 9 = dripping heater 10 = button-operated load 1 11 = button-operated load 2 12 = alarm 13 = on/stand-by 14 = evaporator fan 2 15 = defrost 2	
101	u2	0	enable cabinet light and button-operated load in stand-by	0 = no 1 = yes manual	
102	u4	1	enable alarm output off silencing the buzzer	0 = no 1 = yes	
103	u5	-1.0	threshold for door heaters on	-99... 99 °C/°F differential = 2 °C/4 °F	
104	u6	5	demisting on duration	1... 120 min	
105	u7	-5.0	neutral zone threshold for heating (relative to setpoint)	-99... 99 °C/°F differential = 2 °C/4 °F setpoint + u7	
106	u9	1	enable alarm buzzer	0 = no 1 = yes	
	N.	PAR.	DEF.	REAL TIME CLOCK	MIN... MAX.
107	Hr0	0	enable clock (default 0 in EVLJ224 and EVLJ225)	0 = no 1 = yes	
	N.	PAR.	DEF.	ENERGY SAVING (if r5 = 0)	MIN... MAX.
108	HE2	0	energy saving maximum duration	0... 999 min	
	N.	PAR.	DEF.	REAL TIME ENERGY SAVING (if r5 = 0)	MIN... MAX.
109	H01	0	energy saving time	0... 23 h	
110	H02	0	energy saving maximum duration	0... 24 h	
	N.	PAR.	DEF.	REAL TIME DEFROST (if d8 = 4)	MIN... MAX.
111	Hd1	h-	1st daily defrost time	h = disabled	
112	Hd2	h-	2nd daily defrost time	h = disabled	
113	Hd3	h-	3rd daily defrost time	h = disabled	
114	Hd4	h-	4th daily defrost time	h = disabled	
115	Hd5	h-	5th daily defrost time	h = disabled	
116	Hd6	h-	6th daily defrost time	h = disabled	
	N.	PAR.	DEF.	RESERVED	MIN... MAX.
117	Sd0	- - -	reserved	reserved	
118	Sd1	- - -	reserved	reserved	
119	Sd2	- - -	reserved	reserved	
120	Sd3	- - -	reserved	reserved	
121	Sd4	- - -	reserved	reserved	
122	Sd5	- - -	reserved	reserved	
	N.	PAR.	DEF.	SAFETIES	MIN... MAX.
123	POF	1	enable ON/STAND-BY key	0 = no 1 = yes	
124	Loc	1	enable keypad lock	0 = no 1 = yes	
125	PAS	-19	password	-99... 999	
126	PA1	426	level 1 password	-99... 999	
127	PA2	824	level 2 password	-99... 999	
	N.	PAR.	DEF.	DATA-LOGGING EVLINK	MIN... MAX.
128	rE0	60	data-logger sampling interval	0... 240 min	
129	rE1	4	recorded temperature	0 = none 1 = cabinet 2 = evaporator 3 = auxiliary 4 = cabinet and evaporator 5 = all	
	N.	PAR.	DEF.	MODBUS	MIN... MAX.
130	LA	247	MODBUS address	1... 247	
131	Lb	2	MODBUS baud rate	0 = 2,400 baud 1 = 4,800 baud 2 = 9,600 baud 3 = 19,200 baud	
132	LP	2	parity	0 = none 1 = odd 2 = even	
	N.	PAR.	DEF.	BLUETOOTH	MIN... MAX.
133	bLE	1	enable Bluetooth	0 = no 1 = yes	

8 ALARMS			
COD.	DESCRIPTION	RESET	TO CORRECT
Pr1	cabinet probe alarm	automatic	- check P0
Pr2	evaporator probe alarm	automatic	- check probe integrity
Pr3	auxiliary probe alarm	automatic	- check electrical connection
rtc	clock alarm	manual	set date, time and day of the week
AL	low temperature alarm	automatic	check A0, A1 and A2
AH	high temperature alarm	automatic	check A4 and A5
id	open door alarm	automatic	check i0 and i1
PF	power failure alarm	manual	- touch a key - check electrical connection
COH	high condensation warning	automatic	check C6
CSd	high condensation alarm	manual	- switch the device off and on - check C7
IA	multi-purpose input alarm	automatic	check i5 and i6
iSd	high pressure alarm	manual	- switch the device off and on - check i5, i6, i8, i9
LP	low pressure alarm	automatic	check i5 and i6
C1t	compressor thermal switch alarm	automatic	check i5 and i6
C2t	second compressor thermal switch alarm	automatic	check i5 and i6
dFd	defrost timeout alarm	manual	- touch a key - check d2, d3 and d11

9 TECHNICAL SPECIFICATIONS			
Purpose of the control device		Function controller	
Construction of the control device		Built-in electronic device	
Container		White, self-extinguishing	
Category of heat and fire resistance		D	
Measurements		150.0 x 245.0 x 88.6 mm (5 5/16 x 9 5/8 x 3 1/2 in)	
Mounting methods for the control device		To be fitted on-board, fixing screws not provided	
Degree of protection provided by the covering		IP65	
Connection method		Micro-MaTch connector	
Fixed screw terminal blocks for wires up to 2.5 mm <sup>2</sup>		Micro-MaTch connector	
Maximum permitted length for connection cables			
Power supply: 10 m (32.8 ft)		Analogue inputs: 10 m (32.8 ft)	
Digital inputs: 10 m (32.8 ft)		Digital outputs: 10 m (32.8 ft)	
Operating temperature		From -5 to 55 °C (from 23 to 131 °F)	
Storage temperature		From -25 to 70 °C (from -13 to 158 °F)	
Operating humidity		Relative humidity without condensate from 10 to 90%	
Pollution status of the control device		2	
Conformity			
RoHS 2011/65/CE	WEEE 2012/19/EU	REACH (EC) Regulation 1907/2006	
EMC 2014/30/UE		LVD 2014/35/UE	
Power supply			
230 VAC (+10% -15%), 50/60 Hz (±3 Hz), max. 6 VA insulated		115... 230 VAC (+10% -15%), 50/60 Hz (±3 Hz), max. 6 VA insulated in EVLJ225 with compressor relay rated 16 A res. @ 250 VAC	
Earthing methods for the control device			
Rated impulse-withstand voltage		2.5 KV	
Over-voltage category			
Software class and structure		A	
Clock			
Clock drift		≤ 60 s/month at 25 °C (77 °F)	
Clock battery autonomy in the absence of a power supply		> 24 h at 25 °C (77 °F)	
Clock battery charging time		24 h (the battery is charged by the power supply of the device)	
Analogue inputs			
2 for PTC or NTC probes (cabinet probe and evaporator probe)			
PTC probes	Sensor type	KTY 81-121 (990 Ω @ 25 °C, 77 °F)	
	Measurement field	From -50 to 150 °C (from -58 to 302 °F)	
	Resolution	0.1 °C (1 °F)	
NTC probes	Sensor type	B3435 (10 K Ω @ 25 °C, 77 °F)	
	Measurement field	From -40 to 105 °C (from -40 to 221 °F)	
	Resolution	0.1 °C (1 °F)	
Digital inputs			
1 dry contact (door switch)			
Dry contact	Contact type	5 VDC, 2 mA	
	Power supply	None	
	Protection	None	
Other inputs			
Input configurable for analogue input (auxiliary probe) or digital input (multi-purpose input)			
Digital outputs			
5 (4 for EVLJ224 and EVLJ234) with electro-mechanical relay			
Relay K1		SPST, 16 A res. @ 250 VAC	
Relay K2		SPST, 30 A res. @ 250 VAC in EVLJ225N9V3	
Relay K3		SPDT, 8 A res. @ 250 VAC	
Relay K4		SPST, 8 A res. @ 250 VAC	
Relay K5 (not available in EVLJ224 and EVLJ234)		SPST, 5 A res. @ 250 VAC	
The device guarantees double insulation between each digital output connector and the rest of the components of the device			
Type 1 or Type 2 Actions		Type 1	
Additional features of Type 1 or Type 2 actions		C	
Displays			
LED custom display, 3 digit, with function icons			
Alarm buzzer			
Incorporated sensors:		Bluetooth Low Energy (available in EVLJ234 and EVLJ235).	
Communications ports			
1 TTL MODBUS slave port for EVconnect app, EPOCA remote monitoring system or for BMS.			

For EVLJ234 and EVLJ235 According to European R&TTE Declaration of Conformity this device can be used in the following Countries: Austria, Belgium, Cyprus, Czech Republic, Denmark, Estonia, Finland, France, Germany, Greece, Hungary, Ireland, Italy, Latvia, Lithuania, Luxembourg, Malta, Norway, Poland Portugal, Slovakia, Slovenia, Spain, Sweden, Switzerland, The Netherlands and The United Kingdom.

N.B.  
The device must be disposed of according to local regulations governing the collection of electrical and electronic waste.

This document and the solutions contained therein are the intellectual property of EVCO and thus protected by the Italian Intellectual Property Rights Code (CPI). EVCO imposes an absolute ban on the full or partial reproduction and disclosure of the content other than with the express approval of EVCO. The customer (manufacturer, installer or end-user) assumes all responsibility for the configuration of the device. EVCO accepts no liability for any possible errors in this document and reserves the right to make any changes, at any time without prejudice to the essential functional and safety features of the equipment.